


ProAct™ Analog & Digital Plus

Electric Actuators with Integral Driver

Applications

The ProAct™ Analog product line is a family of electric actuators intended to be mounted on-engine to control varying functions including (but not limited to): fuel rack positioning, timing control, throttle valve, and wastegate positioning. The actuator is effectively a positioner with an integral driver, which will accept a position command signal from another device in the system such as a speed control.



driver capable of controlling the actuator, communicating with the outside control system, and containing on-board software and intelligence to realize monitoring and customizing functions.



Description

The actuators are designed to be base- or flange-mounted (Model IV is base-mounted only) in an on-engine environment and can therefore withstand high levels of vibration and temperature extremes. They all have a 0.625-36 serrated tooth terminal shaft, and an optional rotation scale and indicator are available for visible travel detection. The actuators accept analog or PWM position command signals. In addition, the Digital Plus driver accepts CAN position command signals and can be configured for redundant command signals. It monitors all available internal and external signals, and annunciates any detected faults through a discrete output. An analog output provides actual position indication, and a discrete input is available to remotely shut down the actuator.

Additional features of the Digital Plus driver include on-line and off-line diagnostics, current limiting based on driver electronics temperature, CAN communications, and service port communications. The Digital Plus driver is field programmable, allowing a single design to be used in many different applications. It must be configured and calibrated to the specific engine with a personal computer (PC) and a Woodward Watch Window Service Tool that communicates serially to the driver via RS-232 using Woodward's DDE ServLink protocol. Watch Window Standard can be ordered from Woodward on a CD-ROM (part number 1796-065), or it can be downloaded from the Woodward website (www.woodward.com). Data files for subsequent applications of the same engine model can be downloaded off-engine. The ProAct Analog actuator/driver can be configured without a service tool.

Refer to manual 26112 for more detailed information on the ProAct Digital Plus actuator, and to manual 26147 for more information on the ProAct Analog.

- Extremely fast, bi-directional actuator, electronically positioned in both directions
- All-electric actuator requires no drive or hydraulic supply
- Integral driver compatible with broad range of control systems
- 75° (±2°) rotary output allows direct coupling to butterfly, eliminating linkage
- Multiple sizes to fit broad range of applications

Digital Plus:

- Single or redundant position command signals
- Configurable parameters to tailor to varied applications
- CAN communications
- Advanced Diagnostics

General Specifications


-			Min. Work Output		Maximum Input Power		Maximum Current	
Actuator Model	Typical Part Number	Weight	Transient	Steady State	Transient	Continuous	Transient	Steady State
Model I	Analog-	10.5 kg 24 lbs	3.4 J 2.5 ft-lbs	1.7 J 1.25 ft-lbs	67 W	19 W	3.7 A	1 A
	Digital Plus-	11 kg 25 lbs						
Model II	Analog-	10.5 kg 24 lbs	7 J 5 ft-lbs	3.4 J 2.5 ft-lbs	251 W	65 W	14 A	4 A
	Digital Plus–	11 kg 25 lbs						
Model III	Digital Plus-	15 kg 32 lbs	14 J 10 ft-lbs	7 J 5 ft-lbs	282 W	73 W	15.6 A	4 A
Model IV	Digital Plus-	24 kg 52 lbs	27 J 20 ft-lbs	14J 10 ft-lbs	370 W	100 W	20.6 A	5.6 A

End User I/O Description


	Analog	Digital Plus	
Power Input	18–32 Vdc	18–32 Vdc with out-of-range diagnostics	
Command Input	PWM: 7–32 V, 150–3100 Hz Analog: 20–180 mA and 4–20 mA	PWM: 7–32 V, 100 to 3000 Hz Analog: 20–180 mA or 4–20 mA CAN	
Position Feedback Output	0.5 Vdc and 4.5 Vdc corresponds to full CCW and CW, respectively	4 mA and 20 mA corresponds to 0% and 100% actuator position	
Discrete Inputs	Not Applicable	Low Power standby mode Four CAN address combinations	
Discrete Output	Not Applicable	Normally "ON" turns "OFF" to indicate a detected fault	
RS-232 Serial Communications Not Applicable		9-pin sub-D male connector for connection to PC Service Tool	
CAN 2.0B Serial Communications (optional)	Not Applicable	Complies with SAE J1939 but uses proprietary group extensions. Supports position command signal and monitoring of all shutdown and alarm conditions as well as some system variables.	

Environmental Specifications

	Acceptable Range or		
Specification Item	Qualification Condition	Comments	
Operating Temperature	Analog : -40 to +74 °C.	See Mechanical Installation	
Limits	Digital Plus: -40 to +85 °C. Under all conditions the	section of manual for	
	Temperature Monitoring Zone must remain below 90	discussion of this	
	°C.	specification item.	
Storage Temperature	-40 to +125 °C, unpowered.		
Vibration Qualification Test	Sine: 3.2 mm peak-to-peak for 2-39.4 Hz, 10 G for		
	39.4-300 Hz.		
	Random: 0.01 G ² /Hz at 10 Hz, 0.10 at 100 Hz, 0.10		
	at 1000 Hz, 0.05 at 2000 Hz (12.79 Grms) 3 hours		
	per axis.		
Shock Qualification Test	MS1—40G 11ms sawtooth.		
Ingress Protection	IP56 per EN 60529:1992.		
Humidity Qualification Test	60 °C, 95% RH for five days at one cycle per day.		
Chemical Resistance	The actuator uses materials proven capable of		
	withstanding normal engine environment chemicals		
	per SAE J1455, such as diesel fuel, engine oil, and		
	antifreeze.		

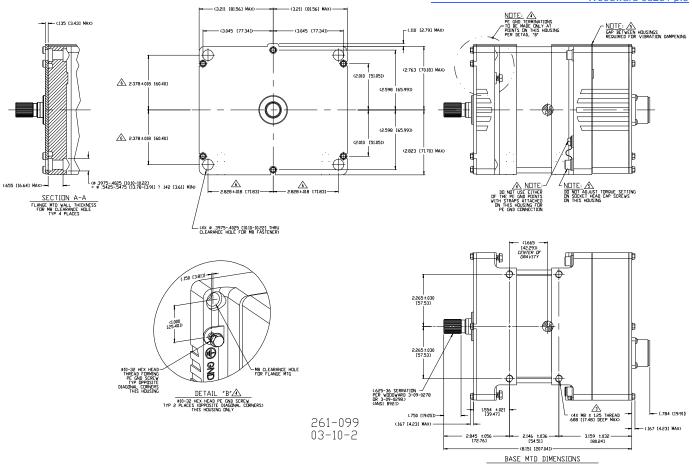

ProAct Analog (Do not use for construction)

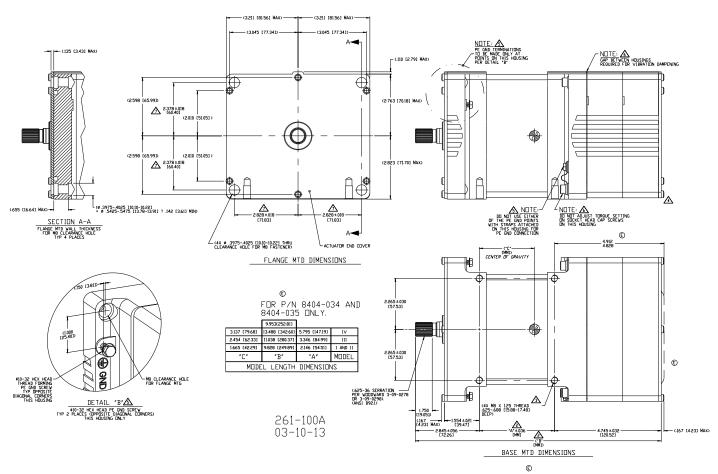

ProAct™ Digital Plus Outline Drawing (Do not use for construction)

Performance Specifications

Parameter	Specification		
Max Slew Rate	> 1000 degrees/second		
	> 18.5 rad/s (10% to 90% travel)		
Position Feedback	Analog—		
Accuracy	±5% of full scale from -40 to +90 °C		
	Digital Plus—		
	< ±1.5% of full stroke at 25 °C after calibration and ±1.5%		
	linearity		
	< 400 ppm/°C, maximum after calibration		
Position Feedback	Digital Plus—		
Linearity	< ±1.5% of full stroke at 25 °C after calibration		
Position Feedback	Digital Plus—		
Repeatability	< ±1.5% of full stroke at 25 °C after calibration		

Regulatory Compliance

European Compliance for CE Mark:

 EMC Directive: Declared to 89/336/EEC COUNCIL DIRECTIVE of 03 May 1989 on the approximation of the laws of the Member States relating to electromagnetic compatibility.

Other European Compliance:

 Machinery Directive: Compliance as a component with 98/37/EC COUNCIL DIRECTIVE of 23 July 1998 on the approximation of the laws of the Member States relating to machinery.

Agency Listings:

- CSA Certified for ordinary locations (Digital Plus only)
- CSA Class I, Division 2 component listing (standard with Analog; optional upgrade with Digital Plus)
- Marine Type Approved by Lloyds Register of Shipping for ENV1, ENV2, ENV3, and ENV4 (Digital Plus only)

Customer Electrical Connections

ProAct Analog

The standard actuator is equipped with a 7-pin MS-style connector.

ProAct Digital Plus

The standard actuator is designed with a blank cover for use with a gland fitting or a custom connector to be supplied by the customer. All inputs and outputs to the ProAct actuator are accessed beneath the end cover, which is fastened with 6 M4x10 mm screws. Input power is connected to size M4 screws, and the wires must be terminated with insulated spade or ring lugs. The I/O terminal blocks are screwless cage-clamp-style blocks that accept wires from 0.20–3.3 mm² (24–12 AWG) wire.

Actuators with an MS-style connector mounted as an option on the end cover are also available. For OEMs, other factory-installed connectors may also be considered.



PO Box 1519, Fort Collins CO, USA 80522-1519 1000 East Drake Road, Fort Collins CO 80525 Tel.: +1 (970) 482-5811 • Fax: +1 (970) 498-3058 www.woodward.com

Distributors & Service

Woodward has an international network of distributors and service facilities. For your nearest representative, call the Fort Collins plant or see the Worldwide Directory on our website.

This document is distributed for informational purposes only. It is not to be construed as creating or becoming part of any Woodward contractual or warranty obligation unless expressly stated in a written sales contract.

stated in a written sales contract.

Copyright © Woodward 2001–2013, All Rights Reserved

For more information contact: